## THERMADATA® PHARM WI-FI LOGGERS

- External sensor(s) designed to simulate fridge contents temperature
- FREE software with NO ongoing or subscription charges
- Access recorded data worldwide via internet
- Programmable high/low alarms

The ThermaData Pharm Wi-Fi loggers are a battery powered, cost-effective, temperature monitoring system that remotely records storage and transportation temperatures of perishable items such as food, vaccines and medication.


Each logger has an intuitive LCD displaying; temperature, Wi-Fi connection status, max/min recorded temperatures, alarm status and battery life. Simple to set up, the logger once up and running will transmit recorded data to a Wi-Fi router connected to the internet which can then be accessed and viewed from a PC, laptop or tablet anywhere in the world.

At programmable intervals, the loggers will record temperature from both sensors, recording up to a maximum of 18000 readings (9000 from each sensor). Each logger incorporates a red and green LED.



The flashing green LED indicates that the logger is active/logging and the flashing red LED indicates that the customised preset alarms have been exceeded. Each logger communicates directly to the Wi-Fi router at set intervals to push data through the internet into ThermaData Studio. The information is available to be analysed and exported into a report format. Each unit is supplied with a USB lead and free wall bracket ThermaData Studio software is available to download FREE from our website and is licence free, no ongoing or subscription charges.

Each thermistor probe is encased in a sealed bottle and incorporates a two metre PUR/PVC fixed lead. To begin monitoring, simply unscrew and top up with Glycol solution (50 ml bottle supplied). **Please Note:** Model TD1F Pharm is supplied with one external remote probe and an internal sensor. Model TD2F is supplied with two external remote probes. For more information contact our sales office.

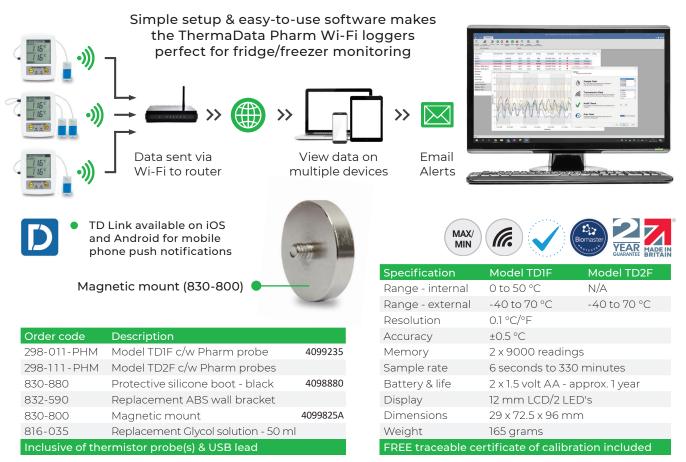

Please note: Wi-Fi routers have a range of 100 metres depending on the make, model, capabilities and setup of the router. Environmental conditions may also affect the signal strength.



ABN 28 000 690 362 TEL: (02) 8855 1700 FAX: (02) 9899 4233 EMAIL: sales@rossbrownsales.com.au WEBSITE: www.rossbrownsales.com.au